



Documentation

EVA3001 Quick Start Guide

Table of Content

Revision History.....2
First Steps to Use EVA Software3
Select Log Mode on tag.....3
Start Monitoring3
Contact4

Revision History

Version	Date	Changes	Page
Initial Version V1.0	03/2010		
V1.1	10/2010	Reduced sites	

First Steps to Use EVA Software

- physical connection of reader with PC and Start Software
- connect Reader via **Connect** button or menu **File→Connect Reader**
- use button **Inventory** to test availability of tag
- Connect battery on EVA-Kit

Select Log Mode on tag

- go to tab **Data Monitor** for selection of various temperature modes
- set **Log Mode**:
 - **Continuous** (measurement at every Log Intervall, default) or
 - **Outband** (measurement at every Log Intervall and out of defined Temp Limit range)
 - set **Temp Limit High** and **Temp Limit Low**
 - set **Temp Average** (default 0 for 2^0)
 - set **Alarm Monitor Count** (default 20)
- set Monitor Time variables
 - set **Startup Time** (default 0 min)
 - set **Log Intervall** (default 1 min)

Start Monitoring

- ensure that all settings and the calibration have been made
 - physical connection, reader connection, battery on EVA-Kit
 - LogMode, Startup Time, Lo Intervall time
- klick button **Start Monitor**
- all defined settings on **Sensor Monitor** and **Sens Cap Def** would be saved to Tag and the monitoring will be started
- wait until **Logging Started ...**

Contact

Germany

Stuttgart

Productivity Engineering
Process Integration GmbH
Behringstrasse 7
D-71083 Herrenberg
Germany
Phone.: +49 (0) 70322798 0
Fax: +49 (0) 70322798 29
Email: info@pe-gmbh.com
Web: www.pe-gmbh.com

Dresden

Productivity Engineering
Branch
Sachsenallee 9
D-01723 Kesselsdorf
Germany
Phone.: +49 (0) 35204777 00
Fax: +49 (0) 35204777 000
Email: info@pe-gmbh.com

Important Notice

Productivity Engineering GmbH (PE) reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to PE's terms and conditions of sale supplied at the time of order acknowledgment. PE warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with PE's standard warranty. Testing and other quality control techniques are used to the extent PE deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed. PE assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using PE components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards. PE does not warrant or represent that any license, either express or implied, is granted under any PE patent right, copyright, mask work right, or other PE intellectual property right relating to any combination, machine, or process in which PE products or services are used. Information published by PE regarding third-party products or services does not constitute a license from PE to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from PE under the patents or other intellectual property of PE. Resale of PE products or services with statements different from or beyond the parameters stated by PE for that product or service voids all express and any implied warranties for the associated PE product or service and is an unfair and deceptive business practice. PE is not responsible or liable for any such statements.

© 2016 PE GmbH. All rights reserved.

All trademarks and registered trademarks are the property of their respective owners.